
 


TO AIRCRAFT ACCESSORIES

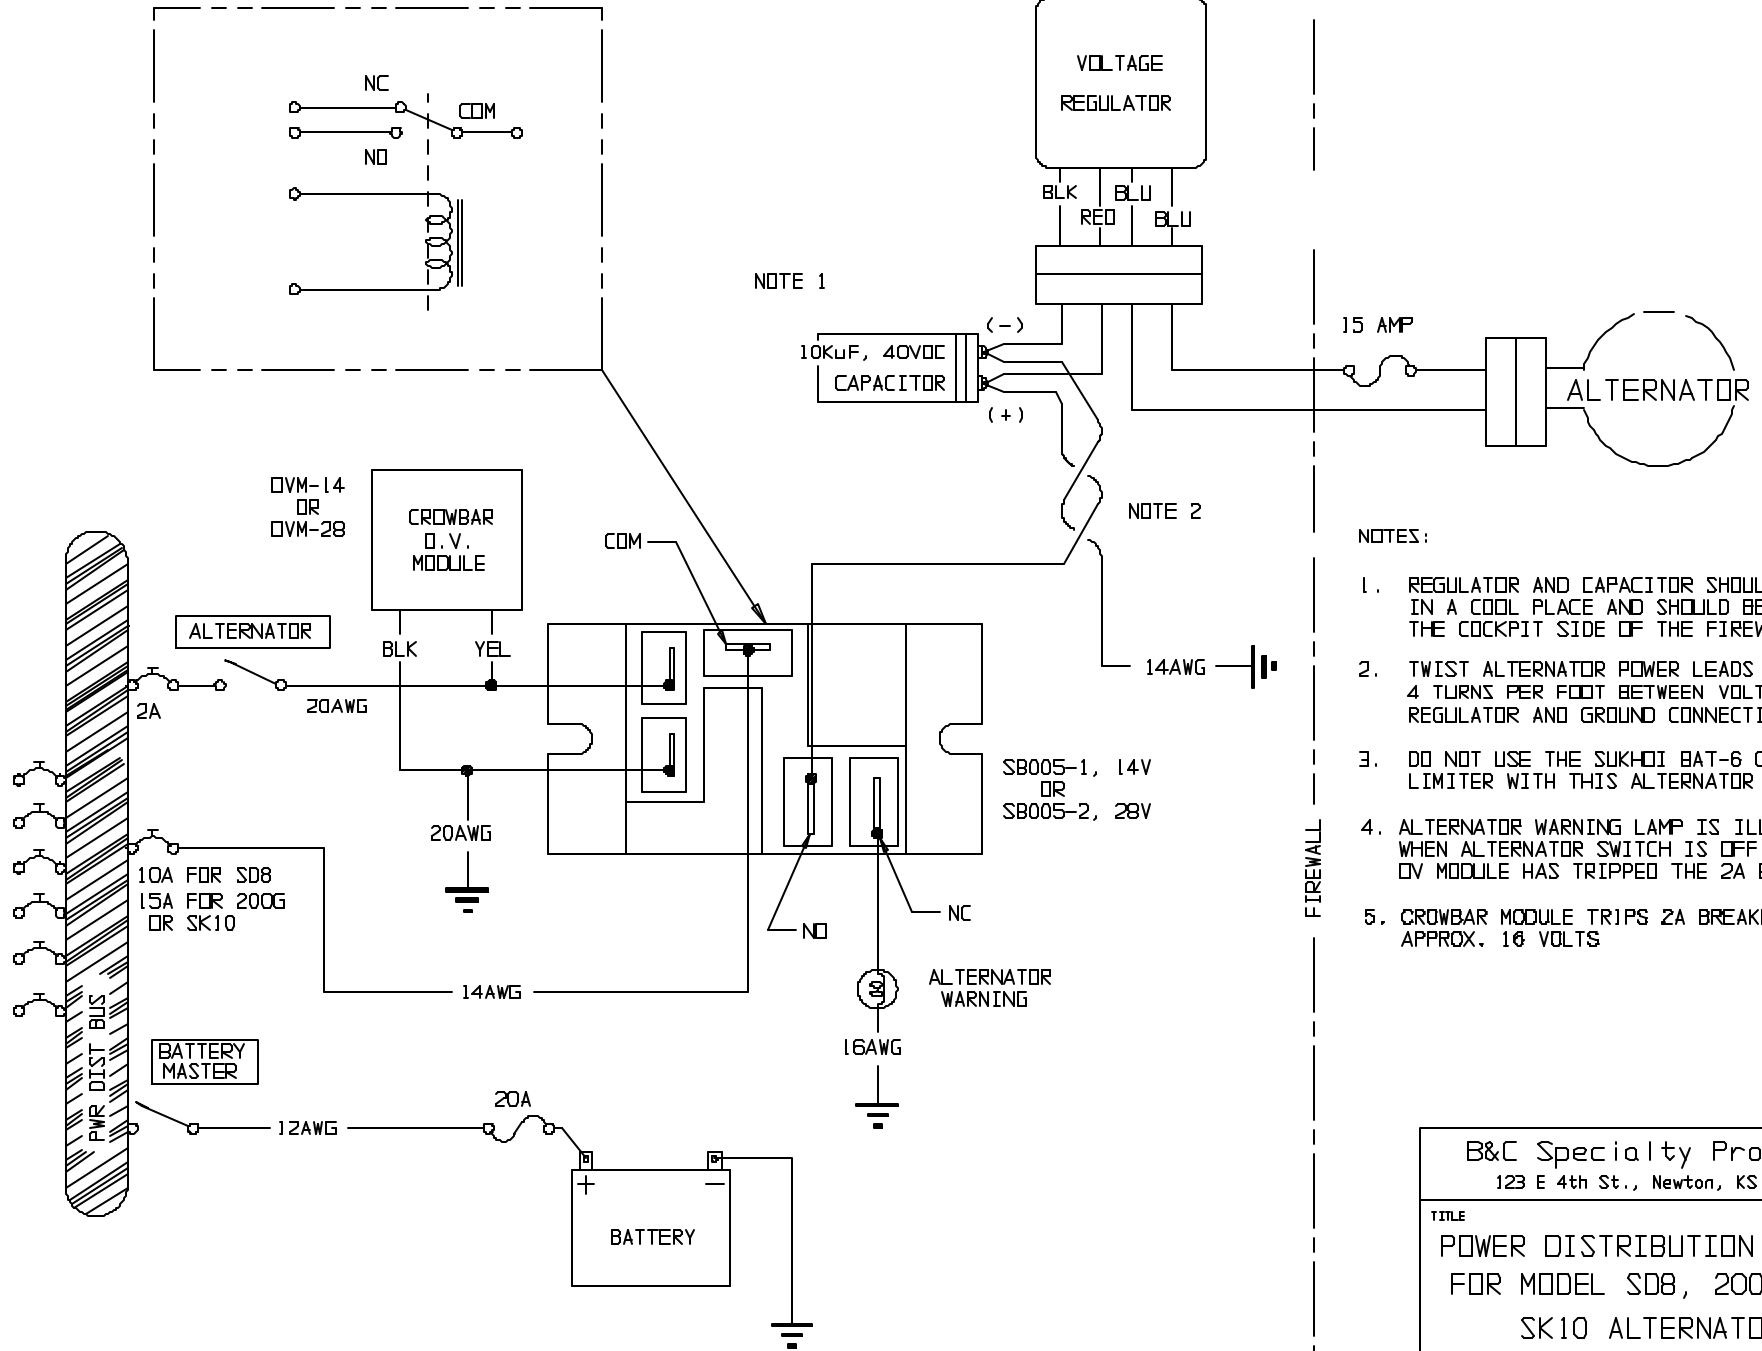

NOTE 1



NOTE 2

15 AMP

NOTES:

1. REGULATOR AND CAPACITOR SHOULD BE MOUNTED IN A COOL PLACE AND SHOULD BE MOUNTED ON THE COCKPIT SIDE OF THE FIREWALL.
2. TWIST ALTERNATOR POWER LEADS APPROX 4 TURNS PER FOOT BETWEEN VOLTAGE REGULATOR AND GROUND CONNECTION.
3. DO NOT USE THE SUKHOI BAT-6 CHARGE LIMITER WITH THIS ALTERNATOR SYSTEM.
4. ALTERNATOR WARNING LAMP IS ILLUMINATED WHEN ALTERNATOR SWITCH IS OFF OR WHEN OV MODULE HAS TRIPPED THE 2A BREAKER
5. CROWBAR MODULE TRIPS 2A BREAKER AT APPROX. 16 VOLTS

FIREWALL

B&C Specialty Products
123 E 4th St., Newton, KS 67114

TITLE
POWER DISTRIBUTION DIAGRAM
FOR MODEL SD8, 200G AND
SK10 ALTERNATORS

DWG NO 504-500 REV E DATE 9/29/04 PAGE 1 OF 1